


## GHPS-Series Polysulfone

GHPS-Series High Purity Polysulfone Filter Cartridges offer exceptional flowrate and loading capability by virtue of its highly asymmetrical pore structure. It's a preferred choice in applications requiring the efficiency of a membrane but where a longer service life is important. Its hydrophilic nature allows immediate wet-out and optimizes the utility of the membrane surface area. Manufactured in a high-purity, thermally-bonded construction for cleanliness and broad compatibility, the optional post-rinse feature provides a cartridge with quick rinse-up to 18 megaohms. Manufactured in a clean-room environment to maintain high standards of purity and cleanliness.

### Flow Rate vs Pressure Drop

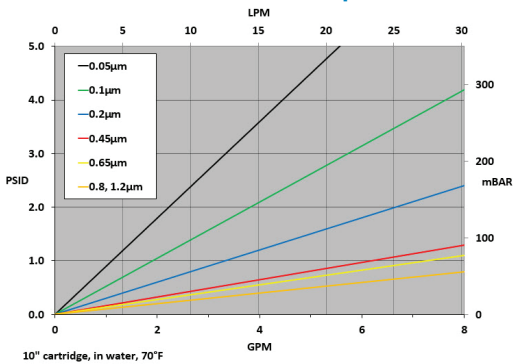

### Typical Applications

- Deionized Water Systems
- General-Use Water Filtration
- Liquid Clarification
- Recirculating Fluids
- Chemical Filtration

### Ordering Information

GHPS	Rating (µ)	A	Length	C	End Cap Style	O-Rings/Gaskets	-	Adders
	0.05		10" (25.4 cm)		2 = DOE Flat Gasket	B = Buna		CS = 316SS Compression Spring
	0.1		20" (50.8 cm)		3 = 222 w/ Fin	E = EPDM		I = Stainless Steel Insert
	0.2		30" (76.2 cm)		4 = 222 w/ Flat Cap	S = Silicone		R = 18 Megaohm Rinse
	0.45		40" (101.6 cm)		6 = 226 w/ Flat Cap	T = Teflon® Encapsulated Viton®		
	0.65				7 = 226 w/ Fin	V = Viton®		
	0.8				16 = 213 Internal O-Ring	Z = Teflon® Encapsulated Silicone		
	1.2				28 = 222 3-tabs w/ Fin			

DISCLAIMER: Filtration data presented is representative of performance observed in controlled laboratory testing. It is not given as a warranty, specification or statement of fitness for use. Specific performance can vary widely depending on contaminant type, fluid properties, flow rates and environmental conditions. It is recommended that users conduct thorough qualification testing to assure the product functions as required.

DS\_GHPS\_200605



### Construction Materials

**Membrane**.....Polysulfone  
**Support Media**.....Polypropylene  
**End Caps**.....Polypropylene  
**Center Core**.....Polypropylene  
**Outer Support Cage**.....Polypropylene  
**O-Rings/Gaskets**.....Buna, EPDM, Silicone,  
 Teflon® Encapsulated Viton®, Viton®,  
 Teflon® Encapsulated Silicone

### Sanitization/Sterilization

**Filter Hot Water**.....80°C for 30 min  
**Steam Sterilization**.....121°C for 30 min.,  
 multiple cycles

**Chemicals:** Cartridges are compatible with most chemical sanitizing agents.

**Note:** Stainless steel insert option required for all cartridges being hot water sanitized or steam sterilized.

### Toxicity

All polypropylene components meet the specifications for biological safety per USP Class VI – 121°C for plastics.

### Dimensions

**Length:**  
 10 to 40 inches (25.4 to 101.6 cm) nominal  
**Outside Diameter:**  
 2.70 inches (7.0 cm) nominal

### Operating Conditions

**Change Out ΔP (recommended)**.....35 PSID  
**Temperature (max)**.....176°F (80°C)  
**Differential Pressure (max)**.....50 PSID  
 (3.4 bar) at 68°F (20°C)

### Food Safety Compliance

Materials of construction comply with FDA regulations for food and beverage contact use as detailed in the US Code of Federal Regulations, 21CFR. Materials used to produce filter media and hardware are deemed safe for use in contact with foodstuffs in accordance with EU Directives 2002/72/EC, 1935/2004, and/or 10/2011.